

## DH44 IR Codeset



### Source Selection

Source 1  
Source 2  
Source 3  
Source 4  
Source Local  
Source Up  
Source Down

### Zone Mute

Mute On  
Mute Off  
Mute Toggle

### Zone Power

Zone Power On  
Zone Power Off  
Zone Power Toggle

### System Power

System Power On  
System Power Off  
System Power Toggle

### Volume Settings

Volume 1  
Volume 2  
Volume 3  
Volume 4  
Volume 5  
Volume 8  
Volume 9  
Volume 10  
Volume 11  
Volume 12  
Volume 13  
Volume 14  
Volume 15  
Volume 16  
Volume 17  
Volume 18  
Volume 19  
Volume 20  
Volume 21  
Volume 22  
Volume Up  
Volume Down

### EQ Settings

Bass Up  
Bass Down  
Bass Flat  
Treble Up  
Treble Down  
Treble Flat  
Balance Left  
Balance Right  
Balance Centered  
DRC<sup>1</sup> On  
DRC Off  
DRC Toggle  
Loudness On  
Loudness Off  
Loudness Toggle

### System Settings

WHM<sup>2</sup> On  
WHM Off  
WHM Toggle  
DND<sup>3</sup> On  
DND Off  
DND Toggle

### Other (Not Used\*)

Volume 23  
Volume 24  
Volume 25  
Volume 26  
Volume 27  
Volume 28  
Volume 29  
Volume 30  
Store Current State  
Set Min TurnOn Vol  
Set Max TurnOn Vol  
Zone Unlink  
Zone Relink  
Local Auto On  
Local Auto Off

\* Not Supported By Existing  
DH44/DH46X/DHTP1 Firmware

<sup>1</sup> Dynamic Range Compression

<sup>2</sup> Whole House Music

<sup>3</sup> Do Not Disturb